



Oil Tools


sales@ServaOilTools.com

ServaOilTools.com

+1 (940) 503-4437



COLLAR STOP

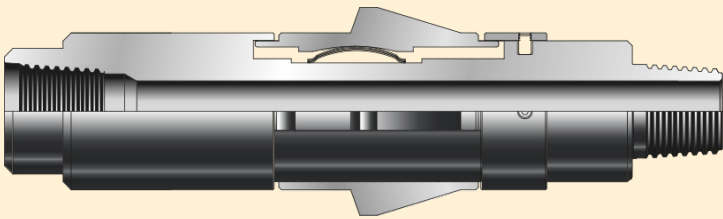

The Collar Stop is designed to locate in the collar recess of API upset and non-upset tubing. The depth can be measured by the value change of the load

SERVA Specification Guide Collar Stop

Casing Size	ID (in)	Length (id)	Load	Thread	Part Number
2 7/8" 6.5#	0.813	13.000	1	1 1/2" AMMT	2111287322
4 1/2" 9.5-11.6#	1.500	16.875	2	2 3/8" P.A.C	2111450322
5 1/2" 15.5-20#	1.500	17.920	2	2 3/8" P.A.C	2111550322
5 1/2" 15.5-20#	1.500	17.920	1	2 3/8" P.A.C	2111550323
5 1/2" 20-23#	1.500	17.920	2	2 3/8" P.A.C	2885510223
5 1/2" 23-26#	1.500	17.920	2	2 3/8" P.A.C	2885510224
7" 26-29#	1.500	19.260	2	2 3/8" P.A.C	2111700322

One company at the center of the energy revolution is uniquely equipped with the know-how and ingenuity to make possibilities happen—SERVAgroup.com